Grand Morse® Prosthetic Kit

Autoclavable polymer case.
To order the pre-mounted version of the kit, with its complete composition, use code 110.304.



Articles


110.294	GM Prosthetic Kit Case
105.146	Neo Screwdriver Torque Connection - Contra-angle (Extra-short)
105.135	Neo Screwdriver Torque Connection - Contra-angle (Short)
105.160	Neo Screwdriver Torque Connection - Contra-angle (Long)
105.138	Hexagonal Prosthetic Driver - Contra-angle
105.137	Hexagonal Prosthetic Driver - Torque Wrench
105.133	Neo Screwdriver Torque Connection (Short) - Torque Wrench
105.132	Neo Screwdriver Torque Connection (Medium) - Torque Wrench
105.157	Neo Long Screwdriver for Torque Wrench
104.005	Manual Screwdriver Torque
128.028	GM Height Measurer
104.050	Torque Wrench

Note: Items that compose Neodent® Kits are sold separately.

Check it out on the eShop, go to: neodent.com/shopnow

Grand Morse® Try-In Kit

Autoclavable polymer case.
To order the pre-mounted version of the kit, with its complete composition, use code 110.305.

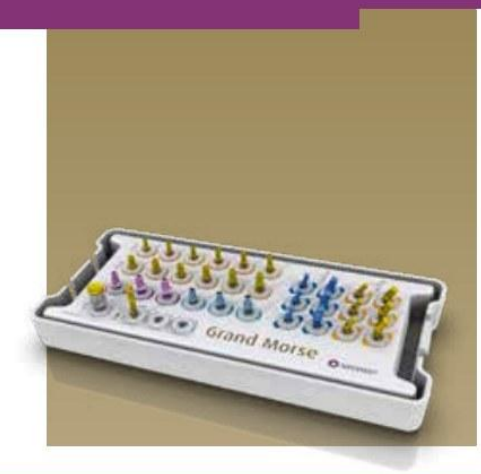

Articles

110.295	GM Try-In Kit Case
114.772	GM Abutment Try-In 3.3X6X0.8
114.773	GM Abutment Try-In 3.3X6X1.5
114.774	GM Abutment Try-In 3.3X6X2.5
114.775	GM Abutment Try-In 3.3X6X3.5
114.776	GM Abutment Try-In 3.3X6X4.5
114.777	GM Abutment Try-In 3.3X6X5.5
114.778	GM Abutment Try-In 4.5X6X0.8
114.779	GM Abutment Try-In 4.5X6X1.5
114.780	GM Abutment Try-In 4.5X6X2.5
114.781	GM Abutment Try-In 4.5X6X3.5
114.782	GM Abutment Try-In 4.5X6X4.5
114.783	GM Abutment Try-In 4.5X6X5.5
114.784	GM Abutment Try-In 17° 3.3X6X1.5
114.785	GM Abutment Try-In 17° 3.3X6X2.5
114.786	GM Abutment Try-In 17° 3.3X6X3.5
114.787	GM Abutment Try-In 17° 4.5X6X1.5
114.788	GM Abutment Try-In 17° 4.5X6X2.5
114.789	GM Abutment Try-In 17° 4.5X6X3.5
114.790	GM Abutment Try-In 30° 3.3X6X1.5
114.791	GM Abutment Try-In 30° 3.3X6X2.5
114.792	GM Abutment Try-In 30° 3.3X6X3.5
114.793	GM Abutment Try-In 30° 4.5X6X1.5
114.794	GM Abutment Try-In 30° 4.5X6X2.5
114.795	GM Abutment Try-In 30° 4.5X6X3.5
114.796	GM Anatomic Abutment Try-In 1.5
114.797	GM Anatomic Abutment Try-In 2.5
114.798	GM Anatomic Abutment Try-In 3.5
114.799	GM Lateral Anatomic Abutment Try-In 1.5
114.800	GM Lateral Anatomic Abutment Try-In 2.5
114.801	GM Lateral Anatomic Abutment Try-In 3.5
104.058	Neo Manual Screwdriver (Short)
128.028	GM Height Measurer

Note: Items that compose Neodent® Kits are sold separately.

Check it out on the eShop, go to: neodent.com/shopnow